

**Door Blanking Plate c/w 2 x Screws - for blanking off existing holes on the single point locking steel security door**



**£10.80**





Door Blanking Plate c/w 2 x Screws - for blanking off existing holes on the single point locking steel security door. Used generally when you want to restrict access externally with the pre-punched handle hole and cover with a blanking plate.

Select colour to match door

Attach the sleeves to the rear of the blanking plate & tighten by hand (be careful not to overtighten as this can damage the blanking plate)

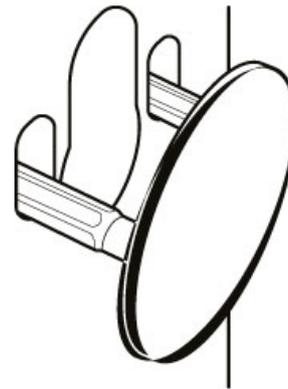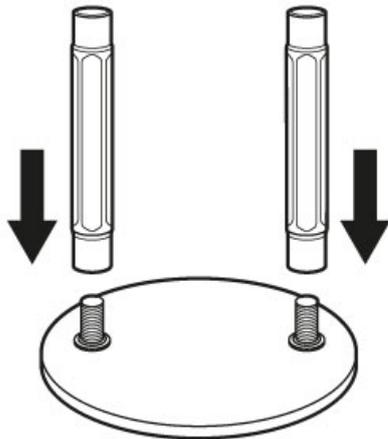

Align & Insert into the door pre-drilled holes from the outside of the door. Repeat for both top and/or bottom holes.

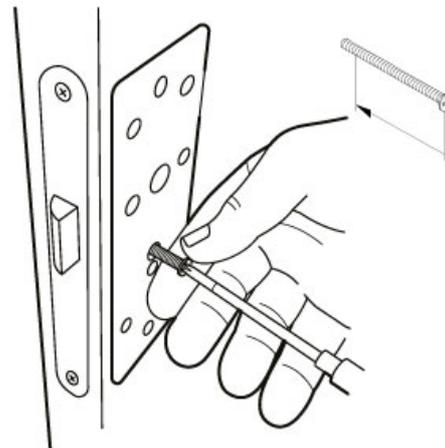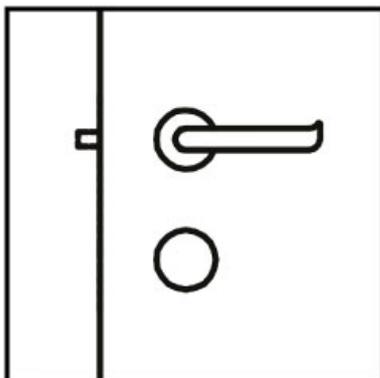

[DOWNLOAD FIRE EXIT PUSH PAD/BAR + EXTERNAL BLANK INSTRUCTIONS](#)

[DOWNLOAD FIRE EXTERNAL BLANK / BLANKING PLATE INSTRUCTIONS](#)

*Note - supplied as 1 pc ie. for 1 hole 1 side. If blanking BOTH the handle and key lock hole, or if looking to blank off an entire hole you will need 2 sets*